



Packing List

- 1. iDEN Interface Cable
- 2. Label containing Option Code
- 3. Datasheet, software license letter
- 4. Radio Dispatch Product CD

Hardware Requirements

The IP-224 iDEN Interface option is used with the following hardware:

- IP-224 Ethernet Adapter Panel
- iDEN Radio

Software Requirements

The IP-224 iDEN Interface option is used with the following software:

• IP-224 Firmware version 1.000 or later

Installation of the iDEN Interface Cable

The IP-224 iDEN Interface cable is used to connect the IP-224 iDEN Interface to an IP-224 and an iDEN radio.

- **CAUTION:** All cables connected to the IP-224 must not exceed three (3) meters in length.
- 1. DB-37, labeled *TO IP-224* Connects to the programmed line connector on the rear panel of the IP-224.
- iDEN Control, labeled *TELEX* Connects to the accessory connector on the bottom 4.
 of the radio.
- 2.55mm Phone Plug, labeled *iDEN* Connects to the external ear/microphone jack in the iDEN radio.

iDEN Interface Options

The **iDEN Option Code**, a unique 32-character code, located on the option code label. The option code is based on the IP-224's specific serial number and cannot be used on another IP-224.

NOTE: The Option Code must be put into the Additional Features configuration webpage before iDEN parameters can be entered.

Quick Start Guide iDEN Interface Cable

To enter the option code, do the following:

1. Open the IP-224 Configuration webpage.

Click **Additional Features**. The Access Additional Features window appears.

- 3. In the Access Key field, enter your **Access Key** (Option Code).
 - Click Submit.

2.

| ACCESS ADDII | IONAL FEATURES | | |
|--------------|------------------------------------|-------------------------|--|
| Access Key: | 4FE4785-78541C87-78519CBE-7415DECD | Submit | |
| | Feature Name | Number Of Lines Allowed | |
| | iDEN Radio | 2 | |
| | EFJohnson Radio | 2 | |
| | FleetSync Encode | 2 | |
| | FleetSync Decode | 2 | |
| | MDC1200 Encode | 2 | |
| | MDC1200 Decode | 2 | |





To **configure the Multicast Address webpage**, do the following:

- **NOTE:** The RX and TX Multicast and Ports must match the Radio Dispatch Console Multicast and Port Values.
- 1. From the IP-224 configuration webpage, click **Multicast Setup**.

2. Click Line Setup. The Line Setup window appears.

- 3. Select the **Enable** check box for the line to configure.
- 4. From the Line Type drop down menu, select **Local Mode**.

The line is set to Local Mode and iDEN is selectable from the Serial Type drop down menu.

- 5. From the Serial Type drop down menu, select **iDEN**.
- 6. In the Line Names field, enter a **user-recognizable name** for the line.
- **NOTE:** For Step 7, Step 8, Step 9 and Step 10, the C-Soft and the IP-224's RX/TX Multicast and RX/TX Port numbers must match.
- 7. In the Rx Mcast field, enter the **Rx Multicast** Address.
- 8. In the Rx Port field, enter the **Rx Port number**.
- 9. In the Tx Mcast field, enter the **Tx Multicast** Address.
- 10. In the Tx Port field, enter the **Tx Port number**.
- 11. Select the Auto Configuration check box.
- 12. Click Submit.

| | | Submit | | | A | uto Configu | v iration: |
|------------------|------------------|---|---|--|--|---|---|
| | | | | | | | |
| Line Enable: | Line Name: | Line Ty | ype: | Seria | al Type: | Vocod | er Type: |
| 1 | iDEN Line | Local Mod | de 🔹 | iDEN | | ADPC | M 32K 👻 |
| | Line 2 | Local Mod | ie 🔹 | Off | | ADPC | М 32К 👻 |
| Mcast Enable: | RX Mcast: | RX Port: | тх | Mcast: | TX Port: | TX Group Port: | m: |
| | 225.8.11.81 | 1054 | 225.8.11.81 | | 1072 | 0 | 6 |
| V | 225.8.11.81 | 1055 | 225.8.1 | 1.01 | 1073 | 0 | 6 |
| | Mcast Enable: | Line Enable: Line Name: DEN Line Line 2 Mcast Enable: RX Mcast: | UP Line Enable: Line Name: Line T IDEN Line] Local Mor IDEN Line 2 Local Mor Line 2 Local Mor Mcast RX Mcast: RX Port: | UP Line Enable: Line Name: Line Type: V iDEN Line Local Mode V Line 2 Local Mode V Mcast RX Mcast: RX Port: TX | UP Line Enable: Line Name: Line Type: Seria DEN Line Local Mode IDEN Line 2 Local Mode Off Mcast Enable: RX Mcast: RX Port: TX Mcast: | UP Line Enable: Line Name: Line Type: Serial Type: IDEN Line Local Mode V IDEN Line 2 Local Mode V Off Mcast Enable: RX Mcast: RX Port: TX Mcast: TX Port: | UP Line Enable: Line Name: Line Type: Serial Type: Vocod IDEN Line Local Mode IDEN ADPC Line 2 Local Mode IDEN Cast Enable: RX Mcast: RX Port: TX Mcast: TX Port: TX Group Port: |

Configuration Overview

NOTE: For configuration information, see the iDEN to IP-224 Interface Installation Manual (P/N F.01U.218.556).

Verify you have completed the following tasks, before starting your iDEN Interface.

- Access the IP-224 web browser configuration window.
- Set up basic IP-224 parameters

System Startup

Once the IP-224 and the iDEN are properly connected and configured, the line name assigned on the Line Setup window appears on the IP-224 front display when powered up or when the unit is reset. This line name appears on the top row, if the radio is connected to Line 1 or the bottom row if the radio is connected to Line 2

NOTE: If the line name does not appear, verify the cable is connected correctly and the IP-224 is enabled for iDEN radio control.

Quick Start Guide iDEN Interface Cable

Contact Information

Sales

| Phone: | (800) 752-7560 |
|---------|----------------------------|
| Fax: | (402) 467-3279 |
| E-mail: | TelexDispatch@us.bosch.com |

Customer Service Repair

| F | Phone: | (800) 553-5992 |
|---|-----------|---------------------------|
| E | E-mail:re | pair.lincoln@us.bosch.com |

Technical Support

| Knowledge Database: http://knowledge.boschsecurity.com |
|--|
| LiveChat:www.telex.com/us/dispatch/support |
| E-mail:TelexDispatchtechsupport@us.bosch.com |
| Web:www.telex.com |