


TELEX

RADIO DISPATCH PRODUCTS



Prerequisites

- Sprint Direct Connect* service from Sprint*
- Sprint Direct Connect license key from Telex Radio Dispatch (purchased option)
- IP-224 Ethernet adapter panel from Telex Radio Dispatch
- AdvanceBridge* and interface cable from AdvanceTec

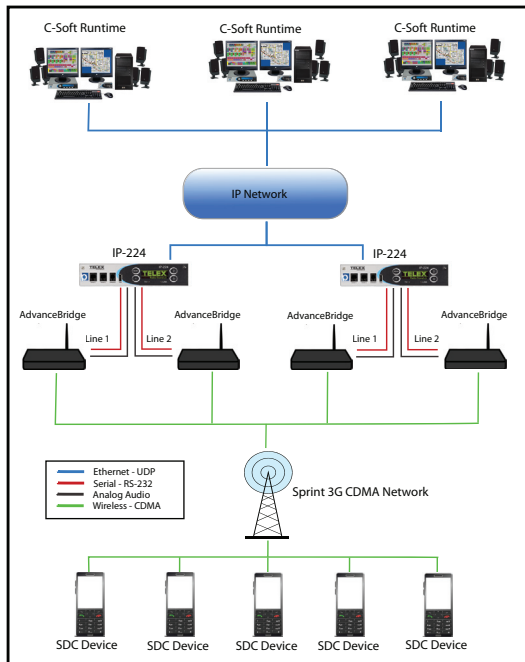

Configuration

NOTE: For detailed instructions on configuring the Sprint Direct Connect interface, see the Sprint Direct Connect Interface Application Guide (F.01U.298.343).

Step 1. Activate Sprint Direct Connect Interface (purchased option)
To activate the Sprint Direct Connect Interface, do the following:

1. Open the **IP-224 webpage**.
2. From the left navigation, select **Additional Features**.
The Additional Features page appears.
3. In the Access Key field, enter the **32-character option key**.
4. Click the **Submit button**.
The Access Key is submitted.
5. From the left navigation, select **Save Parameters**.
The Save Parameters page appears.
6. Click the **Save Parameters button**.
Changes are now permanently saved to the IP-224 console.

Step 2. AdvanceBridge Setup (See Installation)

Step 3. IP-224 Setup

Step 4. C-Soft

Important: The Multicast Address and SOIP configured in the IP-224 webpage must match the C-Soft configuration.

*All other trademarks are property of their respective owners.


Quick Start Guide

Sprint Direct Connect


Installation

To connect the IP-224 Ethernet adapter panel to the AdvanceBridge, do the following:

1. Connect the **DB-37 end of the AdvanceBridge interface cable to RADIO 1 or RADIO 2 connector**.

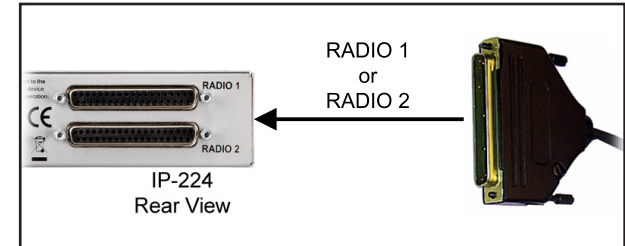

2. Verify the AdvanceBridge is **powered off**.
3. Connect the **DB-15 end of the AdvanceBridge interface cable to the AdvanceBridge**.

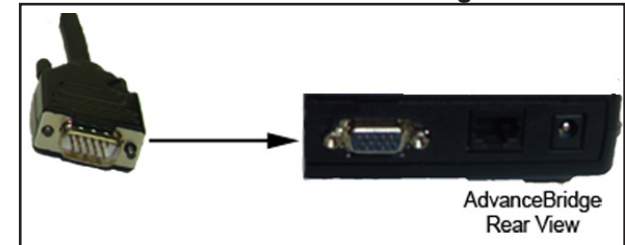

4. Plug the **power cable** to power on the AdvanceBridge.
The power LED is solid green when it connects to the IP-224.
5. Repeat **steps 1-4** to connect a second AdvanceBridge to the IP-224, if necessary.